



10811

FIG. 268—STEERING GEAR

- 1—Nut
- 2—Lockwasher
- 3—Steering Gear Arm
- 4—Lever Shaft Oil Seal
- 5—Outer Housing Bushing
- 6—Inner Housing Bushing
- 7—Filler Plug
- 8—Cover and Tube
- 9—Ball Retaining Ring
- 10—Cup

- 11—Ball (Steel)
- 12—Tube and Cam
- 13—Shims
- 14—Upper Cover
- 15—Lockwasher
- 16—Bolt
- 17—Steering Wheel
- 18—Horn Button Retainer
- 19—Horn Button
- 20—Horn Button Cap

- 21—Nut
- 22—Spring
- 23—Spring Seat
- 24—Bearing
- 25—Horn Cable
- 26—Horn Button Spring
- 27—Spring Cup
- 28—Steering Column
- 29—Oil Hole Cover
- 30—Clamp

- 31—Adjusting Screw
- 32—Nut
- 33—Bolt
- 34—Side Cover
- 35—Gasket
- 36—Shaft and Lever
- 37—Housing