



10554

FIG. 228—STEERING KNUCKLE AND WHEEL BEARINGS

1—Bearing Adjusting Nut
 2—Lockwasher
 3—Lockwasher
 4—Bearing Cone and Rollers
 5—Bearing Cup
 6—Spindle
 7—Bushing
 8—Filler Plug

9—Left Knuckle and Arm
 10—Shims
 11—Upper Bearing Cap
 12—Lockwasher
 13—Bolt
 14—Oil Seal and Backing Ring
 15—Thrust Washer
 16—Axle Pilot

17—Oil Seal
 18—Bearing Cup
 19—Bearing Cone and Rollers
 20—Oil Seal
 21—Retainer
 22—Bolt
 23—Lower Bearing Cap
 24—Bolt